



**K-KN4Z** - Kona

**INSTRUCTION MANUAL**

 **ALUMAX**  
*Kula Collection*

KONA NEO ANGLE SLIDING SHOWER DOOR





Please keep this manual and product code number for future reference  
and replacement parts ordering if necessary.

- **General Instructions**

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

- **Installation over Ceramic Tiles**

- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.
- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.

- **Notice**


- Caulking: no sealant is required inside the shower.
- All models are equipped with transparent sealing gaskets.

- **Care for your Frameless Shower Door**


- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.  
An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and aluminum parts looking new.
- We recommend wiping the glass panels with a squeegee after each use.

Product specifications are subject to change  
without notice.


## TOOLS AND MATERIALS REQUIRED

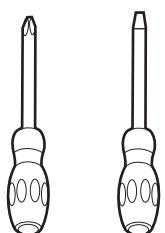


SCREWDRIVERS

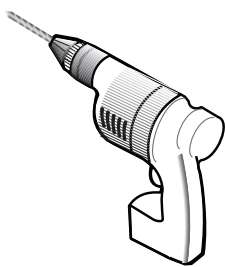

DRILL

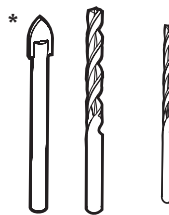


1/4" & 1/8" DRILL BITS

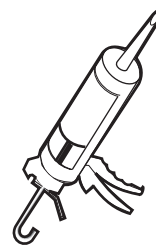

SILICONE



PENCIL

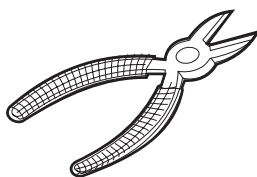


CUTTING PLIER



TAPE MEASURE



MALLET

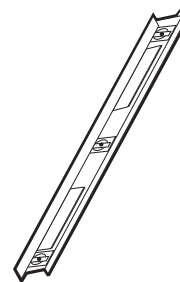











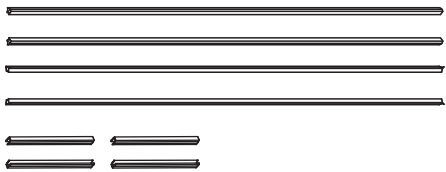

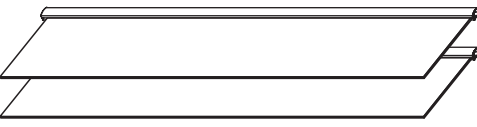
LEVEL




**2 PEOPLE REQUIRED**



◆ Box Contents:

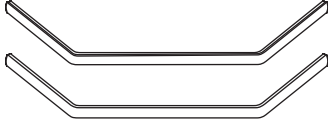[1] 2xWall Posts		
[2] 2xHorizontal Rails		
[3] 1xInstallation Instruction		
[4] 8xWall Plugs 16xScrews M4x35		
[5] 8xScrews M4x8 8xScrew Cover Caps		
[6] 2xHandle Sets		
[7] 2xMagnetic Seals		
[8] 8xWater Deflectors		
[9] 2xDoor Panels		
[10] 2xFixed Panels		

## ◆ Assembly Drawing



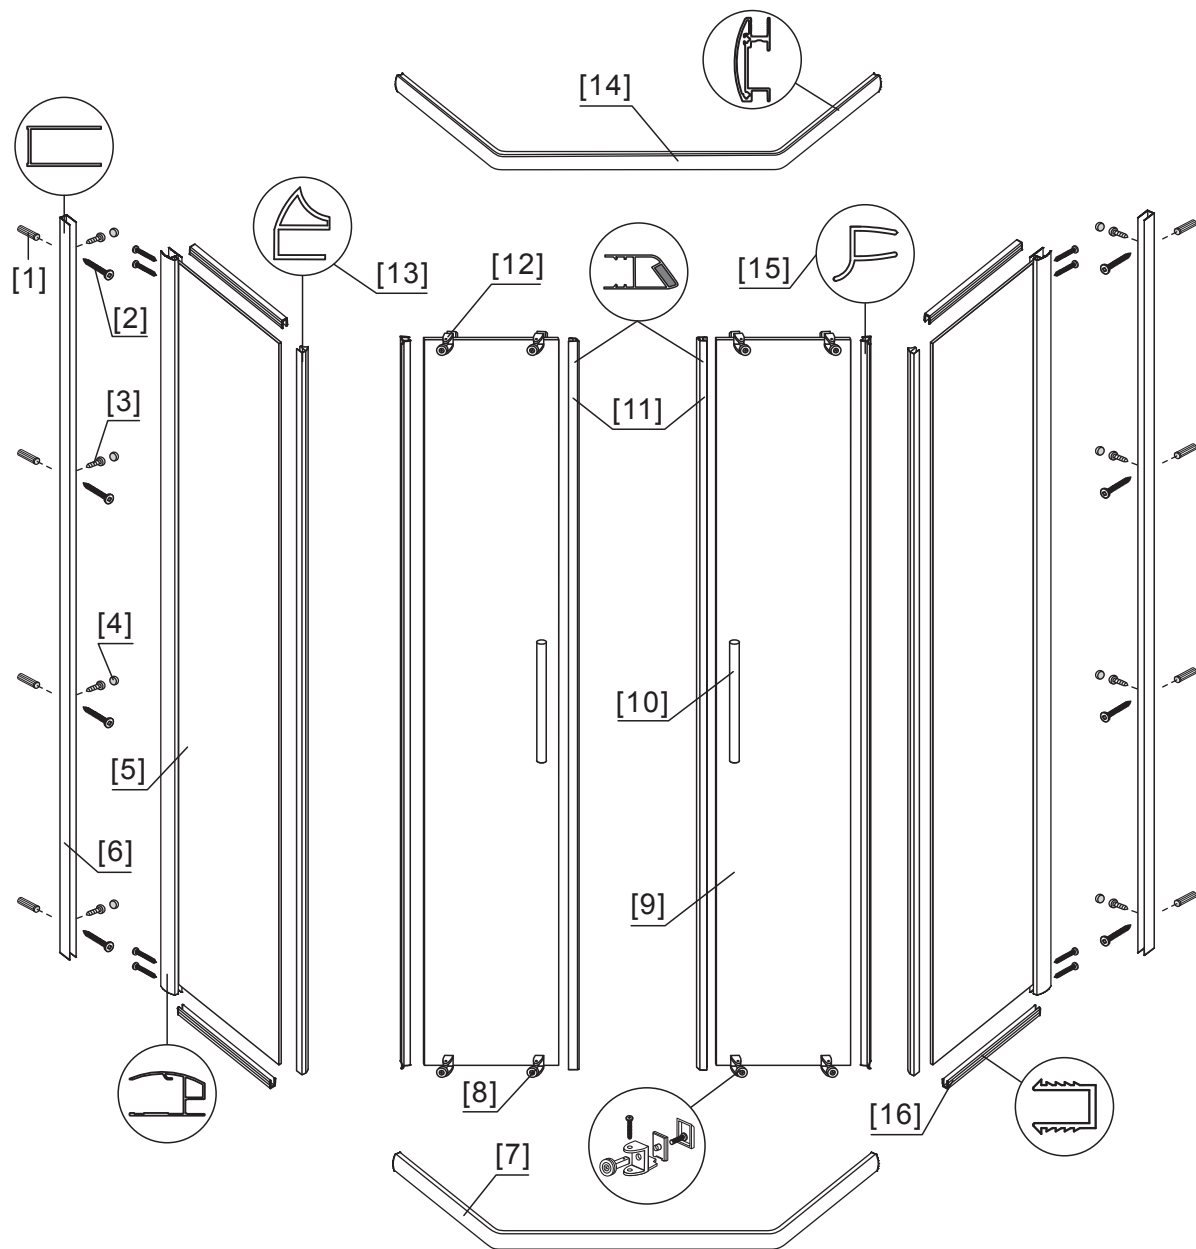


- [1] 8xWall Plugs
- [2] 16xScrews M4x35
- [3] 8xScrews M4x8
- [4] 8xScrew Cover Caps
- [5] 2xFixed Panels
- [6] 2xWall Posts
- [7] 1xBottom Horizontal Rail
- [8] 4xBottom Rollers


- [9] 2xDoor Panels
- [10] 2xHandle Sets
- [11] 2xMagnetic Seals
- [12] 4xTop Rollers
- [13] 2xWater Deflectors
- [14] 1xTop Horizontal Rail
- [15] 2xWater Deflectors
- [16] 4xWater Deflectors

## ◆ Installation Steps:






### Step 1

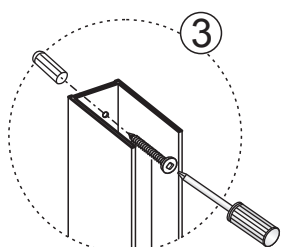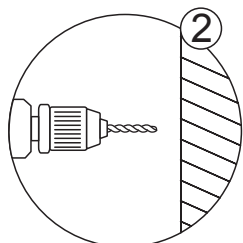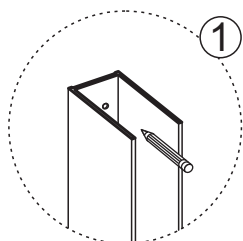

Screw M4x35



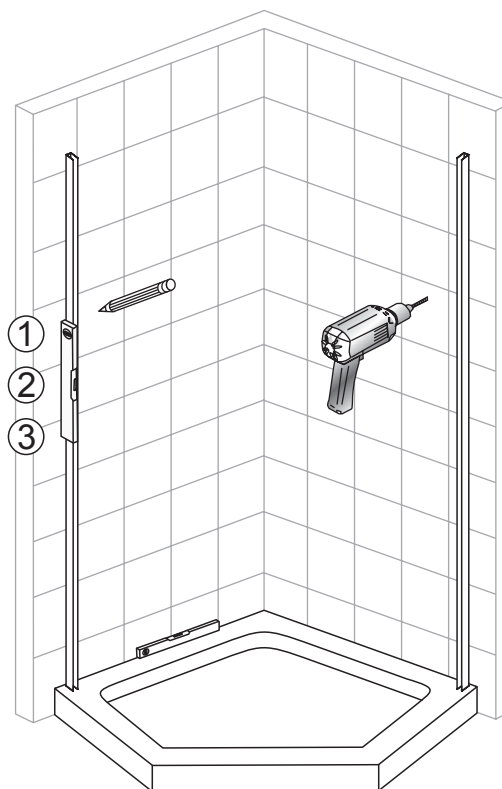


### Step 2

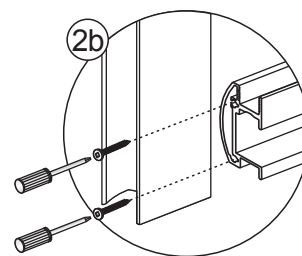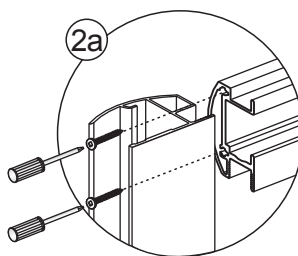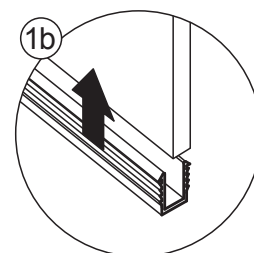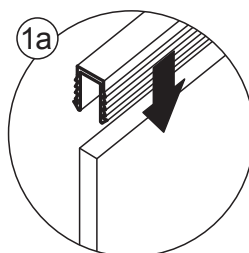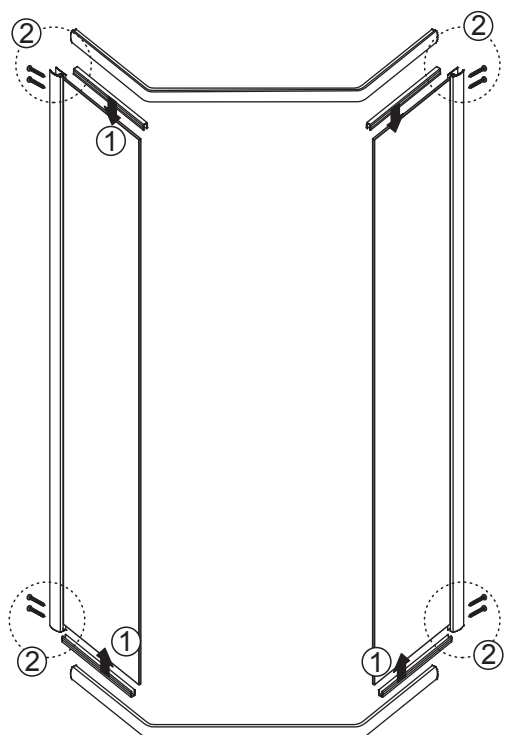







View from inside

Step 3

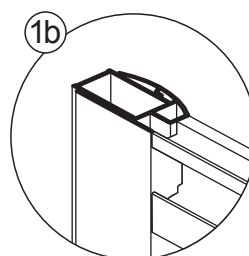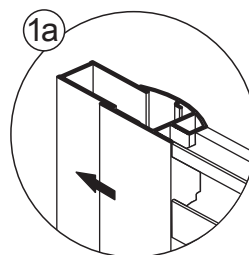
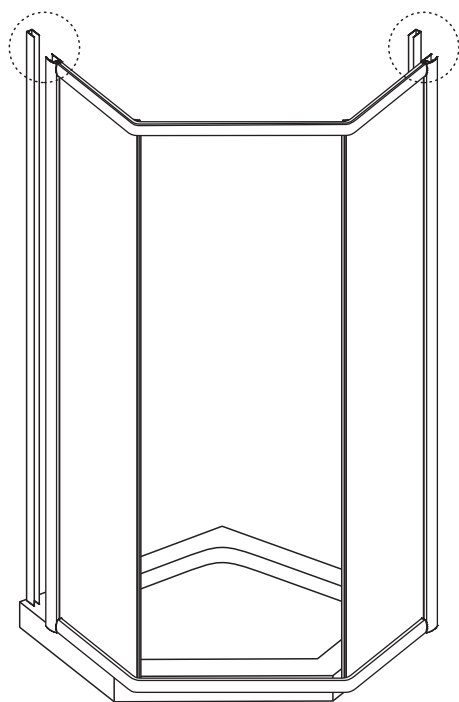


View from inside

Step 4

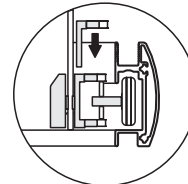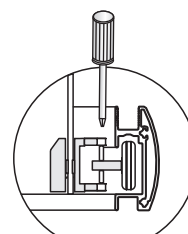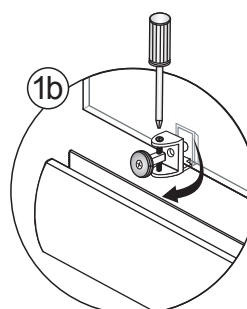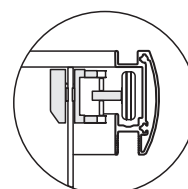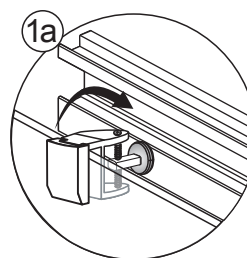
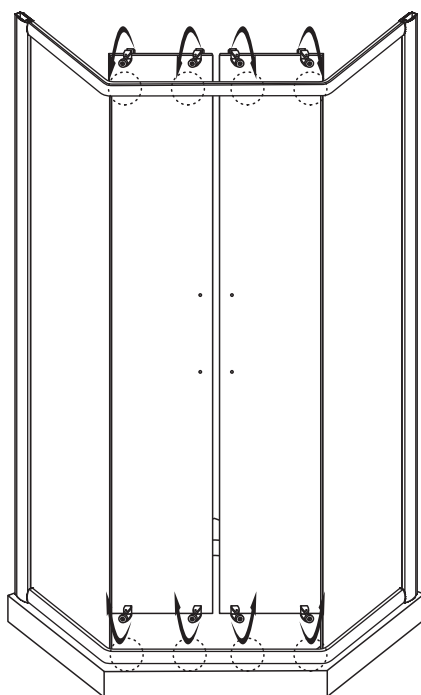


## Step 5

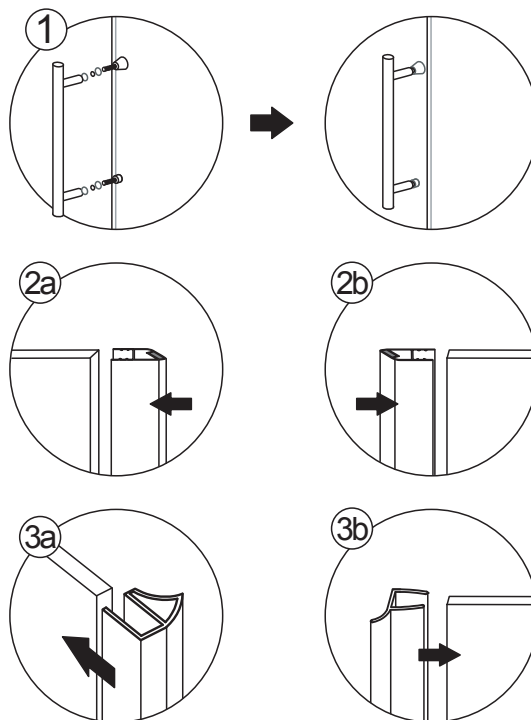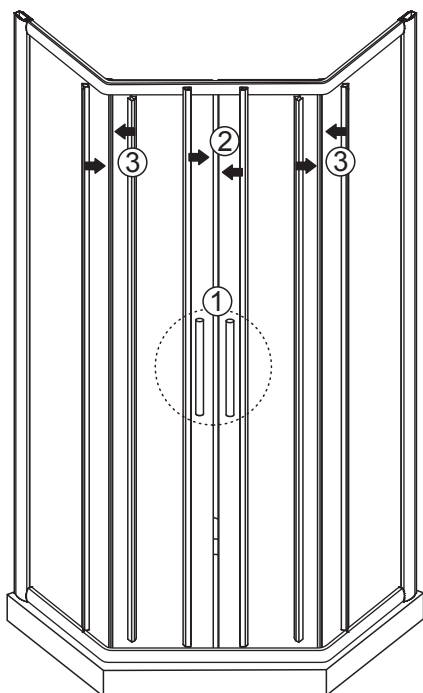

Ensure wall profiles are plumb. Adjust enclosure to be square and level. Wall post and profile should be adjust to square the doors and Ensure open door smooth.



## Step 6

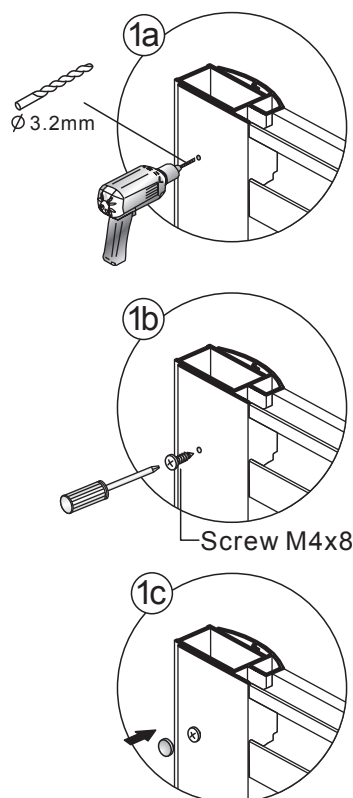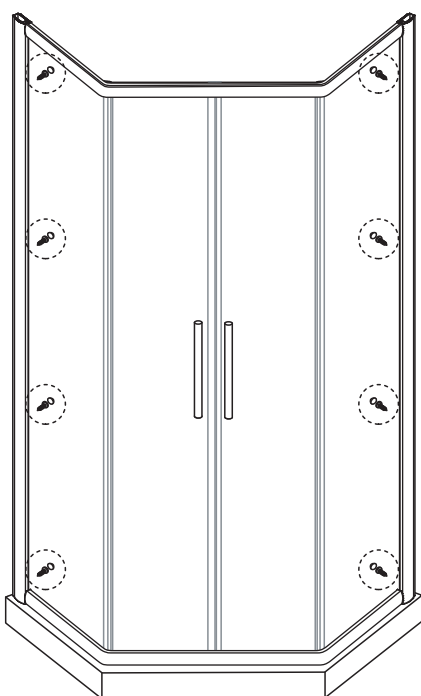

View from inside



## Step 7

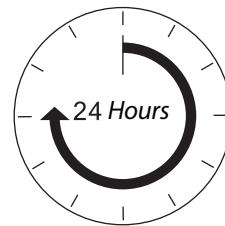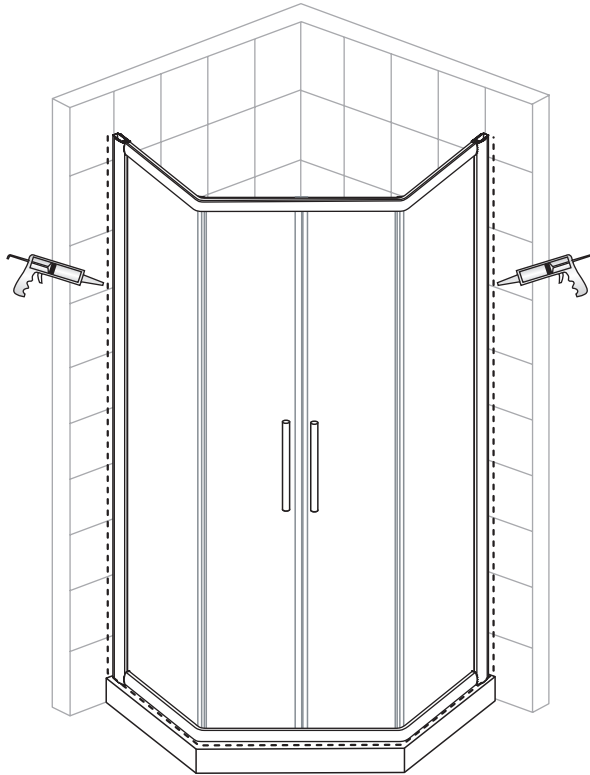

**Allow 24 hours for silicone to dry before use.**